



SYNERGEE

BATTLE ROPE ANCHOR

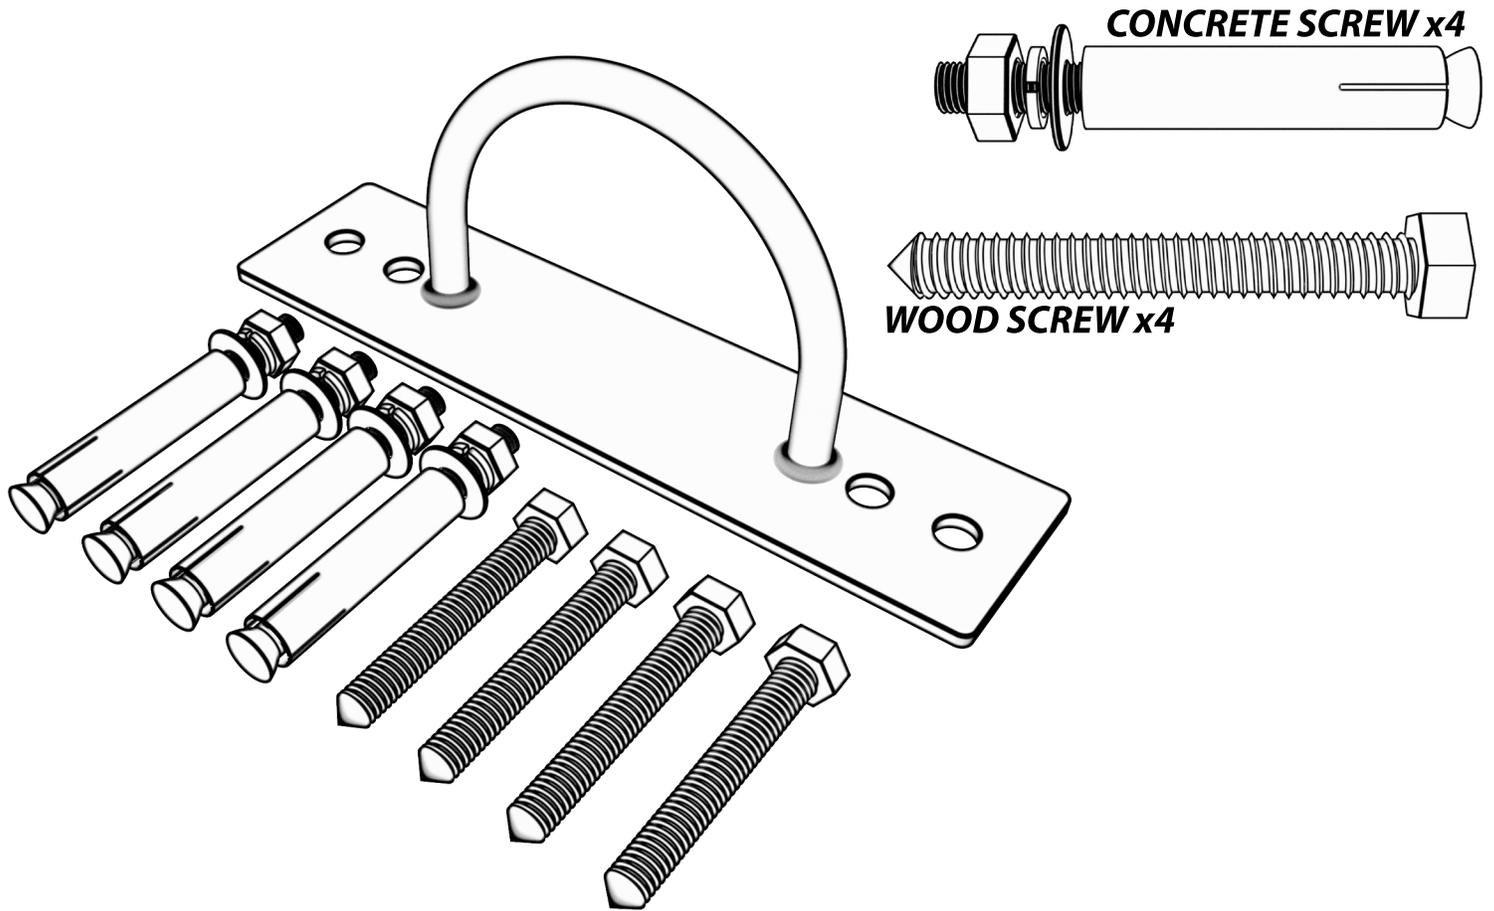


WOOD INSTALLATION

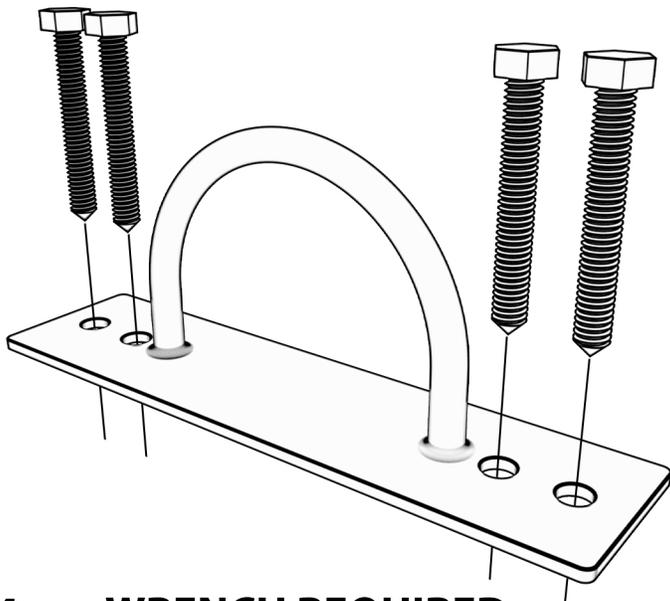

14mm WRENCH REQUIRED

LOCATE WOOD STUD AND FASTEN WOOD SCREWS UNTIL SECURE

CONCRETE INSTALLATION

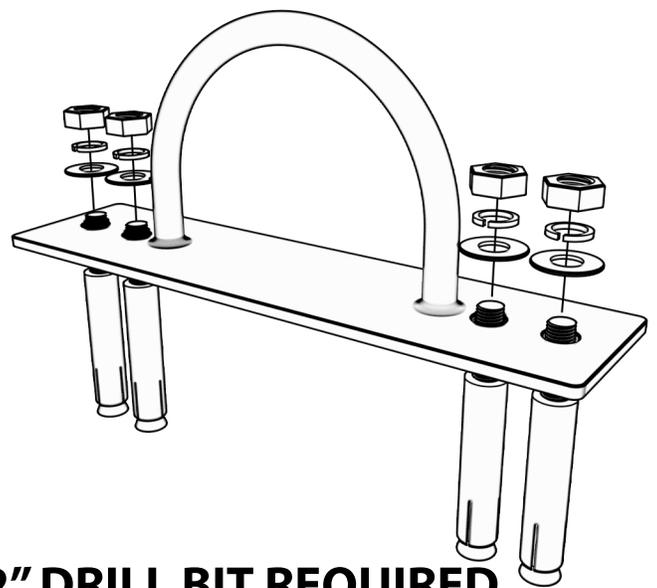

1/2" DRILL BIT REQUIRED

BORE OUT 1/2" HOLES IN CONCRETE AND INSERT CONCRETE SCREW ASSEMBLY INTO HOLES. TIGHTEN NUT UNTIL SECURE.